



# TomTom ONE Motherboard Replacement

Written By: Becca



## INTRODUCTION

Overtime the motherboard's wires may come apart and make the device stop working. This guide will show you how to replace the motherboard with a new one.

---



### TOOLS:

- [Spudger](#) (1)
  - [T7 Torx Screwdriver](#) (1)
  - [T9 Torx Screwdriver](#) (1)
-

## Step 1 — Motherboard



- Use a T-9 Torx screwdriver to unscrew the four screws on the back cover.


## Step 2



- Using the spudger, gently pry apart the back case from the front case. It is easier to start on a side and work your way around the device.




## Step 3

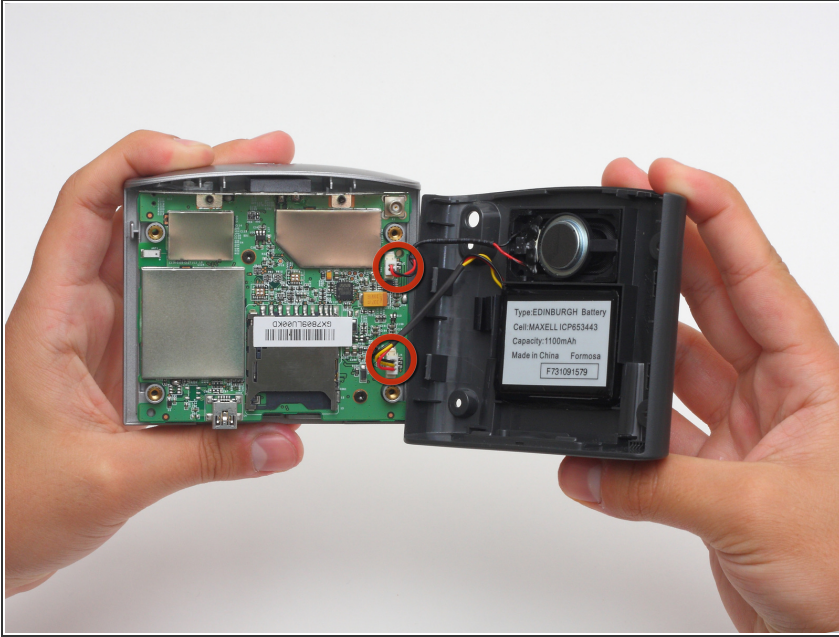


**⚠** Carefully pull the back cover apart from the front cover. Be careful not to pull too hard because there are two sets of wires connecting the device.

## Step 4

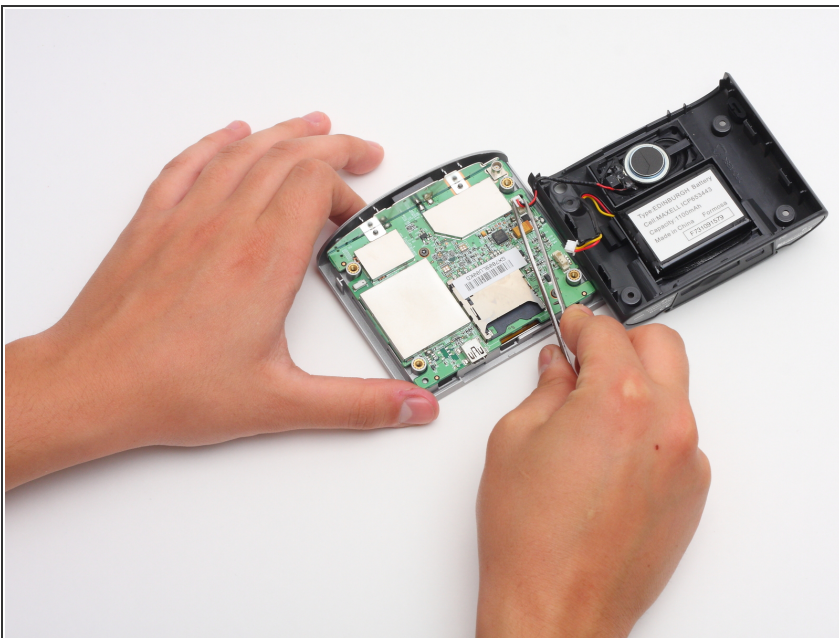



- Once the two covers are separated, use tweezers, or even your fingers, to gently disconnect the two sets of wires that are connected to the motherboard from the back cover.

## Step 5

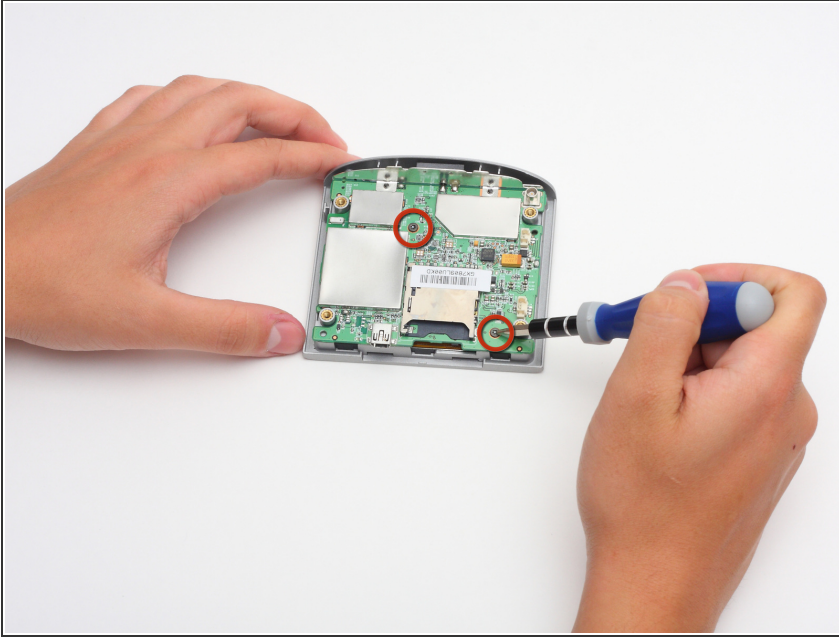


- Next, you must remove the motherboard from the front screen.
- Use a Torx T-7 screwdriver to unscrew the two screws.

## Step 6

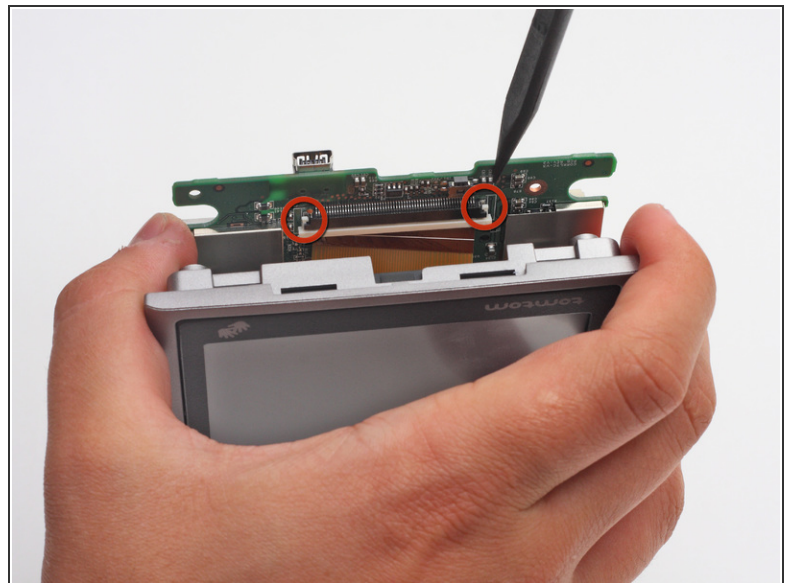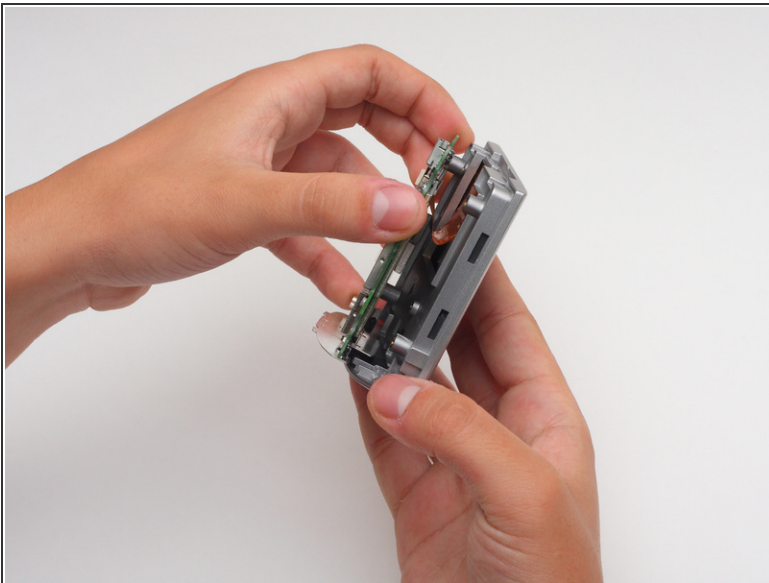

- Before you can separate the motherboard from the front cover, you must disconnect the wire connecting the two.
- To do so, you must use the back end of the spudger to push out the two white tabs connected to the wire, that holds the motherboard and front cover together.

## Step 7

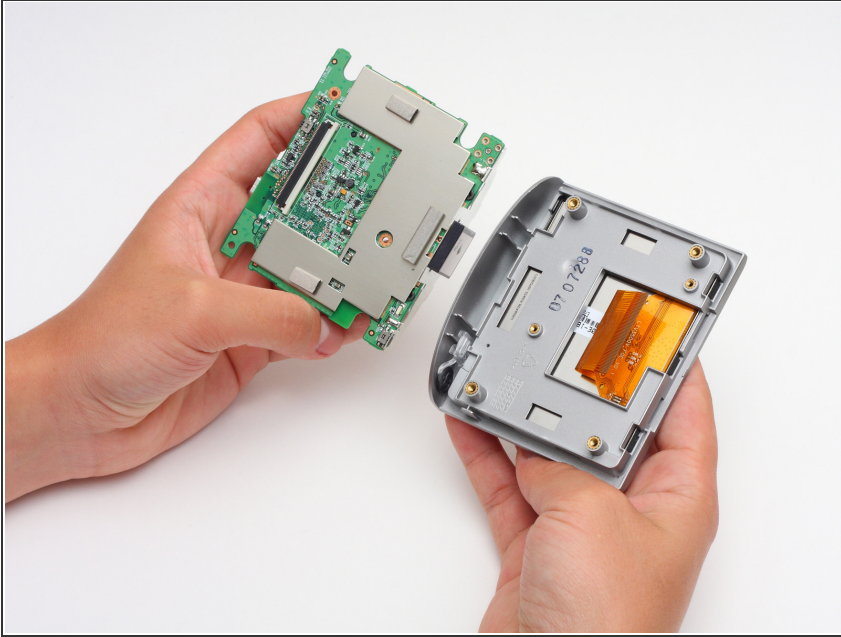

- The motherboard is now disconnected from the front assembly

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:13:49 AM.